

MANTI TELE COMMUNICATIONS COMPANY



To turn your TV on with our remote, follow these steps:

1. Press the TV Button.
2. Press the red Power Button.
3. Press the STB Button.

To turn your TV off with our remote, follow these steps:

1. Press the TV Button.
2. Press the red Power Button.

To Adjust the Volume with our remote:

1. Press the VOL + button to turn the volume up.
2. Press the VOL - button to turn the volume down.
3. Press the MUTE button to turn the volume off.
4. Press the MUTE button again to turn the volume back on.

To Change Channels with our remote:

1. Press the CH + button to go up one channel.
2. Press the CH - button to go down one channel.
3. Press the LAST button to go back to the last channel you were on.

OR

4. Use the numbered buttons (0-9) to type in the desired channel number.

To use the On-screen Guide with our remote:

1. Press the Guide Button.  
(**Note:** If you have the Mini Guide (Mine EPG) turned on, you will need to hit the Guide Button twice to bring up the full-screen guide.)
2. Use the silver Arrow Buttons to highlight the show you want to watch.
3. Press the OK Button to tune to the highlighted show.

**NOTE:** The EXIT button will close the guide.