

MANTI TELE COMMUNICATIONS COMPANY



To program our remote to control the power and volume on your TV:

1. Make sure your TV is turned on.
2. Press the TV button.
3. Press and hold the Setup button until the TV button flashes.
4. Press 9 9 1 on the numbered buttons. The TV button will flash again.
5. Press the number 1 button.
6. Press the red Power button.
7. Press the CH + button repeatedly and slowly until your TV turns off.

**NOTE:** To make sure you have the correct code, once your TV turns off you can press the CH – a couple times, and then press the CH + again a couple times until the TV turns back on. Then go to the next step.

8. Press the Setup Button to finish the programming.

You should now be able to control the power and volume on your TV using our remote.