

## HOW TO USE YOUR DVR SYSTEM





To Pause Live TV:

1. Press the PAUSE (||) button.
2. Press the PLAY (>) button to resume watching TV from where you paused it.
3. Press the STOP button to "catch up" to Live TV.

NOTE: You may also use the FAST FORWARD and REWIND buttons during playback.

To Record a show you are currently watching:


1. Press the red Record button.
2. Choose either the Record or Record Series option.
3. Press OK.
4. Press OK one more time to confirm recording.

To Record a show from the On-screen Guide:

1. Press the Guide button.
2. Use the silver Arrow Keys to highlight the show you want to record.
3. Press the red Record button.
4. Choose either the Record or Record Series option.
5. Press OK.
6. Press OK one more time to confirm recording.


Tips for navigating through the On-screen Guide:

- The silver Arrow Keys will only move the highlight one channel or time slot at a time.
- Use the PAGE + or PAGE - to move up or down an entire group of channels at a time.
- Use the DAY + or DAY - to move forward or backward an entire group of time slots at a time.
- Use the FAST FOWARD (>>) or REWIND (<<) buttons to move a day forward or backward in the Guide.

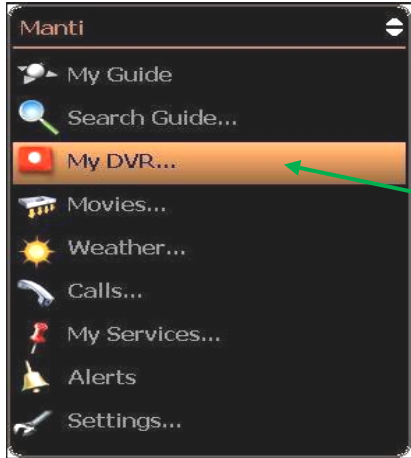

**To view a recorded show:**

 1. Press the **Menu Button** on our remote. This button is located to the right of the Guide Button.
2. Using the silver Arrow Keys, highlight My DVR in the menu screen.
3. Press the OK Button.
4. Choose how you want to sort your recordings from the menu that follows, then press the OK Button.

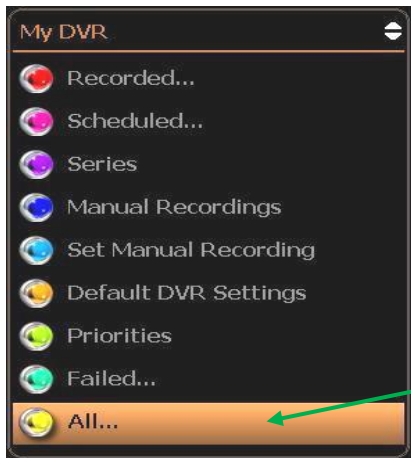

**Recorded:** Shows just items that have finished recording.

**Scheduled:** Shows just items that have been scheduled for recording.


**Series:** Shows any Series recordings you have set up.

**Manual Recordings:** Shows any Manual Recordings you have set up.

**Failed:** Shows any items that failed to record.

**All:** Shows all recordings, scheduled or completed.

For the purposes of this tutorial we will select All recordings.

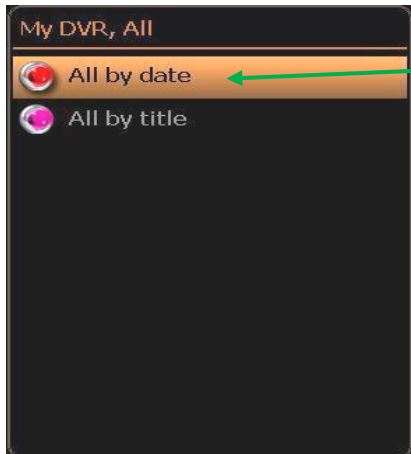


5. Choose to view your recordings sorted either by date or alphabetically by title.
6. Press the OK Button.

# MANTI TELE COMMUNICATIONS COMPANY



 7. Using the silver Arrow Keys, highlight the show you want to watch or edit.
8. Press the OK Button.
9. From the next menu, choose what you want to do with the show you selected.

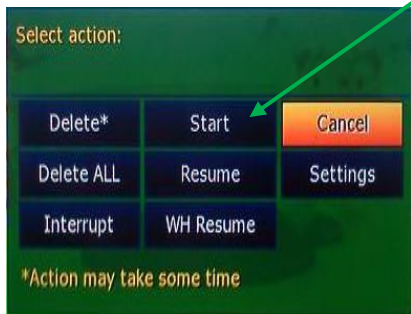

**Start:** Begins playback of the selected show. Choose this option if you want to watch the recorded show.

**Delete:** Removes the recorded show from memory. This deletes the show permanently, and you will no longer be able to watch it.

**Delete ALL:** Removes every show that has ever been recorded on your DVR and clears the memory completely. You will not be able to recover your recordings, so please **be careful** with this option.

**Resume:** Resumes playback of a recorded show from the last known stop point. Use this option if you were watching a recorded show and had to stop it in the middle of playback.

**WH Resume:** Resumes playback of a paused recording on a different TV (only available with Whole Home DVR).

**Interrupt:** If you have chosen the Record Series option for a particular show, this option will interrupt the recording of that series. The program will no longer be automatically recorded each time it is on.

**Stop Recording (not pictured):** Use this option if you wish to stop recording a show that is currently being recorded.

**Settings:** Displays the current record settings for the selected program. Settings cannot be changed from this menu. If you wish to change these settings go to the My DVR menu and select Default DVR Settings.

**Cancel:** Exits this menu without making any changes.

10. Press the OK Button to make your selection.



**Features available during playback:**

**Pause** – Pressing the pause button (||) will pause the recording during playback. To resume playback from the pause point, simply press the **Play** button.

**Fast Forward** – Pressing the Fast Forward (>>) button during playback will advance the recording quickly so that you may skip portions of the recording. Pressing the Fast Forward multiple times will make the recording advance more quickly. There are 4 fast forwarding speeds available (2x, 4x, 8x, and 16x).

**Rewind** – You can rewind a show during playback by pressing the Rewind (<<) button. Like the Fast Forward option, you can rewind at 4 different speeds by pressing the rewind button multiple times.

**30 Second Skip** – The **Day+** button will skip the recorded show ahead by 30 seconds each time you press it. This is a great option to use for skipping past commercials or unwanted scenes.

**Stop** – Pressing the Stop button will stop playback of a recording and pop up a window giving you the option of going back to Live TV or deleting the recording. Select which option you want and then press the OK Button.